Prepare your site




Basics you should know before buying your HP Latex 110 Printer

Read the information provided in this document to complete compliance with all installation and operation requirements, safety procedures, warnings, precautions, and local regulations.

Physical space requirements

The pathway between the unloading area of the printer and the installation site must be clear when the printer arrives.

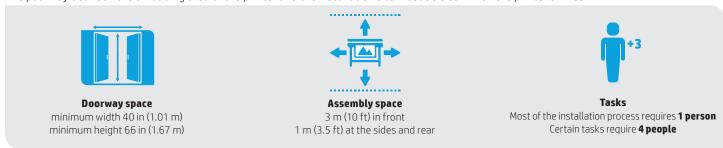

Printing supplies to be purchased in addition

 
In addition to the printer, the following supplies should be purchased and made available on the day of installation:



Electrical configuration

According to the Electrical Code requirements of the local jurisdiction of the country where the equipment is installed, the customer must provide and install the following electrical components:

Single phase line specifications



	HP Latex 110 Printer	Curing
Input voltage	~200-240 V +-10% (two wires and protective earth)	
Input frequency	50/60 Hz	

For more information please visit hp.com/go/latex110/manuals

© Copyright 2015 HP Development Company, L.P. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

4AA5-9246ENW, July 2015 This is an HP Indigo digital print.